



COMBO WEIGHTS - P354



INSTRUCTIONS

- Weigh car before attaching weights. Add or deduct weight per official race rules. We recommend making your car the maximum weight allowed.
- Glue flat side of a Combo Weight to each side of car (test fit with wheels before gluing) (**Fig. 1**) or place two flat sides together to form a cylinder weight (fits a 3/8" diameter hole) (**Fig. 2**). Secure with PineCar Formula Glue® (P384).
- To modify weight of Combo Weights, remove a portion of the weight along the molded-in lines with pliers.

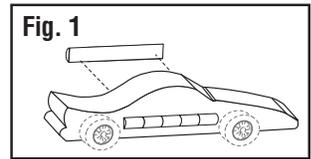

INSTRUCTIONS

- Pesez la voiture avant attache au poids. Ajoutez ou déduisez le poids par règles officielles de course. Rendez votre voiture le poids de maximum.
- Appliquer la colle au dos de le poids à l'emplacement aux côtés de la voiture (vérifier l'assemblage des poids avec les roues avant le collage) (**Fig. 1**) ou placer au dos de le poids ensemble pour former un poids de cylinder (ont adapté une cavité du diamètre 3/8-pouce) (**Fig. 2**). Fixer avec de la PineCar colle de formule (P384).
- Pour modifier le poids des les poids de combinaison, enlevez une partie du poids le long du mouler-dans des lignes à l'aide de des pinces (**Fig. 1**).



Made in USA F6 ©2003 O CO

PINECAR® Manufactured by

WOODLAND SCENICS® PO BOX 98, LINN CREEK, MO 65052 • woodlandscenics.com